


Notes:


- $\circ \quad 1 \ {}^{3}\!\!{}^{4''} \ solid \ core \ door \ mounted \ to \ 2 \ {}^{1}\!\!{}^{4''} \\ door \ jamb \ with \ {}^{1}\!\!{}^{2''} \ stop.$
- Doorknob Options: Contact your project manager for more details.
- The ball catch strike plate must be set on jamb so that when the door is closed, it sits flush against the jamb stop.

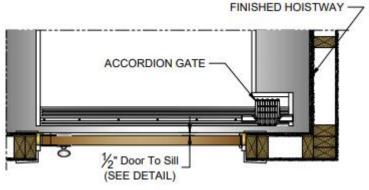

Accredited Home Elevator Company www.accelevator.com (800) 488 5905

AHE | 127 S Main Street Barnegat, NJ 08005 | marketing@accelevator.com



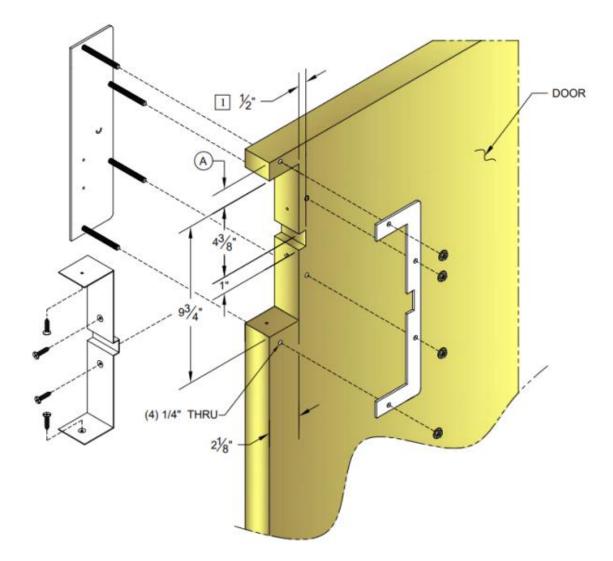

Door Height	Α
80"	2"
84"	5"
96"	17"


Accredited Home Elevator Company www.accelevator.com (800) 488 5905

AHE | 127 S Main Street Barnegat, NJ 08005 | marketing@accelevator.com




Plumbing of Hoistway Doors:

- For jurisdictions enforcing ASME A17.1 2016 and later, Doors must be 1¾", Solid Core set on flush mount elevator jambs. See your elevator contractor for more detail.
- All doors must be installed inline and plumb with one another at each floor.

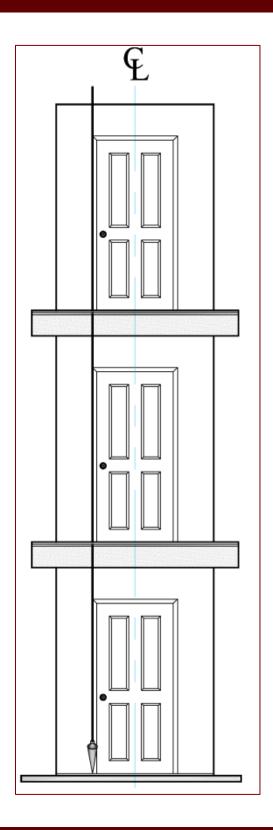

Accredited Home Elevator Company www.accelevator.com (800) 488 5905 AHE | 127 S Main Street Barnegat, NJ 08005 | marketing@accelevator.com




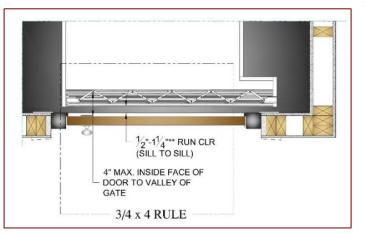

- Doors must be hung flush with the inside hoist way drywall leaving maximum ³/₄" from closed door to inside edge of sill/drywall.
- Inner Hoist way door casing/trim is not to be applied until after the elevator device is installed.
- Clearance between landing floor and underside of hoist way door must not exceed 3/8".

As Stated Per ASME 17.1 (3/4" Rule) :

- The clearance between the face of the 1³/₄" solid core door from inside the hoist way to the hoist way sill cannot exceed more than 3/4 inches.
- The clearance between the face of the 1³/₄" solid core door from inside the hoist way to the outside face of the gate on the elevator cannot exceed more than 4 inches.

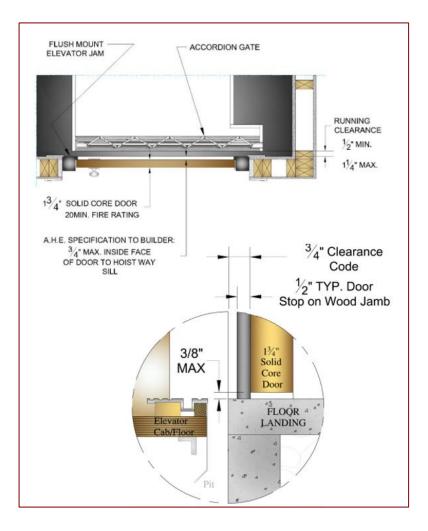

Accredited Home Elevator Company www.accelevator.com (800) 488 5905 AHE | 127 S Main Street Barnegat, NJ 08005 | marketing@accelevator.com